



Food Service ELECTRIC HOTBAG - Usage and Care Instructions

GENERAL INSTRUCTIONS

- 1.) Pre-Heat the HOTBAG by plugging bag into the PDU-6-US or HBPS-1, and make sure power is “ON.”
- 2.) Open the top lid and place food products into the HOTBAG. Close top lid and secure Velcro closure.
- 3.) Connect PDU power cord, 12volt cigarette power cord, or Scooter Power Adapter to the bag using the quick release connector on the front side of the HOTBAG.
- 4.) For the 12volt Lighter Plug Power Cord, make sure the cigarette plug adapter fits securely into the lighter outlet (a loose connection could damage plug and stop power to the HOTBAG).
- 5.) At the time of delivery simply disconnect power cord using the quick release connector on the front of the HOTBAG (Note: Leave related power cord plugged into the power source).

WASHING INSTRUCTIONS

- 1.) Remove Heating Elements using access panel found on the rear of the bag (zippered opening).
- 2.) HOTBAGS can be washed using a front loading commercial washing machine, such as those found at your local Laundromat.
- 3.) Pre-treat any heavily soiled areas with a dish detergent such as Dawn. This will help loosen existing grease and dirt, making the machine wash more effective.
- 4.) Wash bags on “Normal” cycle, using HOT water and a standard detergent.
- 5.) After bags have gone through a complete cycle, check the bags for badly soiled areas which may not have come clean with a single treatment, and wash again.

DRYING INSTRUCTIONS

- 1.) Dry bags on Medium heat for approx. 20 minutes.
- 2.) If bags are still slightly damp, install the heating elements in the bag and plug the bag into a power supply. This will help dry the bags from the inside out, and will reduce the risk of mildew.

TROUBLE SHOOTING

- 1.) Make sure the related power cord is properly connected with the bag.
- 2.) 12vDC connection - Check fuse located in the cigarette plug (push down metal tip and turn counter clockwise to remove fuse) and/or check fuse of your vehicles cigarette lighter, located in the main fuse panel.
- 3.) S.P.A - Check battery terminal connection and connection to the HOTBAG.
- 4.) Make sure connector contacts are clean and free of corrosion.
- 5.) If your HOTBAG does not heat up after reviewing the above steps, contact Richard Larpenteur at Check Corporation – Direct Dial: (248) 687-2721

DO NOT

- 1.) **DO NOT** stand bags on end while they are in use.
- 2.) **DO NOT** set any items on top of the bag.
- 3.) **DO NOT** use dishwasher or dryer.
- 4.) **DO NOT** dry clean or steam clean.
- 5.) **DO NOT** place sharp objects in or on HOTBAG
- 6.) **DO NOT** leave HOTBAG plugged into 12v cigarette power outlet when not in use (battery may discharge).