



HOTBAG Food Service Bags - Usage and Care Instructions

WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Symbol for Caution hot surface

GENERAL INSTRUCTIONS

- 1.) Place pizza and /or other food products into the HOTBAG. Close front flap by pressing Velcro strips together.
- 2.) Connect PDU power cord or 12 volt cigarette power cord to the bag using the quick release connector in the front flap of the HOTBAG
- 3.) For the 12volt Lighter Plug Power Cord, make sure the cigarette plug adapter fits securely into the lighter outlet (a loose connection could damage plug and stop power to the HOTBAG).
- 4.) At the time of delivery simply disconnect power cord using the quick release connector on the front of the HOTBAG (Note: leave power cord plugged into the 12vold lighter outlet).

WASHING INSTRUCTIONS

- 1.) Remove Heating Element using access panel found on the rear of the bag (zippered opening).
- 2.) HOTBAGS can be washed using a front loading commercial washing machine, such as those found at your local Laundromat.
- 3.) Pre-treat any heavily soiled areas with a dish detergent such as Dawn. This will help loosen existing grease and dirt, making the machine wash more effective.
- 4.) Wash bags on "Normal" cycle, using HOT water and a standard detergent.

DRYING INSTRUCTIONS

- 1.) Make sure the front flap on the HOTBAG is closed, and that the rear access pouch is unzipped and left open.
- 2.) Dry bags on HIGH heat for approx. 20 minutes.
- 3.) If bags are still slightly damp, install heating elements in the bag and plug the bag into a power supply. This will help dry the bags from the inside out, and will reduce the risk of mildew.

DO NOT

- 1.) **Do Not double stack bags while they are in use (powered). Each bag should have a designated shelf position.**
- 2.) **Do Not** stand bags on end while they are in use.
- 3.) **Do Not** set any items on top of the bag.
- 4.) **Do Not** use dishwasher.
- 5.) **Do Not** dry clean.
- 6.) **Do Not** place sharp objects in or on HOTBAG
- 7.) **Do Not** leave HOTBAGS plugged into 12v cigarette power outlet when not in use (battery may discharge).
- 8.) **Do Not** fold the Heating Element in half, in or outside of the HOTBAG

TROUBLE SHOOTING

- 1.) Turn cigarette plug inside the lighter socket to improve connection. Green LED will illuminate on the power plug when a proper connection is made.
- 2.) Check fuse located in the cigarette plug (push down metal tip and turn counter clockwise to remove fuse).
- 3.) Check fuse of your vehicle cigarette lighter, located in main fuse panel.
- 4.) Check power cord and plug for broken or frayed wires.
- 5.) Make sure connector contacts are clean and free of corrosion.
- 6.) If your HOTBAG does not heat up after reviewing the above steps, contact the Check Corporation at 1-800-WARMS-UP.